
























INTRODUCTION



Thank you for purchasing the ACTIVE TUBE!

Active Tube is a manual vaporizer made of tempered glass with double active filters.

This will give you a new quality of the herbs consumption.

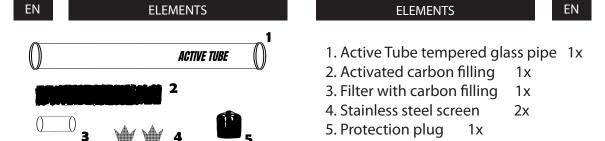



Take off the protection plug and load 0.05-0.2g / 5-20 mm of your dried product into the tube.



Put the tube on the side of the charcoal filter to your mouth.



USE THE WAY YOU LIKE:
A: Heating the tube without burning a dried product
B: As an active tube by burning a dried product.



Let the air out.

ΕN

MAINTENANCE

accessories) to replace the Active Tube interior. Use a cotton swab to wipe the inner part of the Active

Tube. The Active Tube glass tube is dishwasher safe *

Use a wooden stick (available in the Active Tube

When the product is heated, the glass may become hot.

Active Tube.

Be careful not to get burnt from the hot glass tube.

Replace Active Tube filter (elem. 3) after each session. It is recommended to replace the Active Tube interior after 10x.

^{*} Logo on the glass may become discolored.

Vielen Dank für den Kauf von ACTIVE TUBE!

Active Tube ist ein manueller Verdampfer aus gehärtetem Glas mit doppelten Aktivfiltern. Dies gibt Ihnen eine neue Qualität der Kräuterkonsum.





Ziehen Sie den Schutzstopfen ab und geben Sie 0,05-0,2g / 5-20mm Ihres getrockneten Produkts in das Glasrohr.



Stecken Sie das Glassrohr an der Seite des Kohlefilters in den Mund.

SCHRITT 3

SCHRITT 4



Lassen Sie die Luft raus.

Benutzen Sie, wie Sie es mögen:
A: Erwärmung des Glassrohres ohne Verbrennung
eines getrockneten Produkts

B: als aktiver Verdampfer durch Verbrennen eines getrockneten Produkts.

um den Innenraum des Active Tube neu zu ersetzen.

(im Active Tube Zubehör erhältlich)

Verwenden Sie einen Wattestäbchen. um das Innere des Active Tube abzuwischen. der Benutzung des Active Tube sorgfältig durch.

WARNUNG

Wenn das Produkt erhitzt wird, wird das Glas heiss. Achten Sie darauf, nicht von der heissen Glasröhre zu verbrennen.

Aktive Tube Filter (elem. 3) nach jeder Nutzung neu ersetzen.

Die Active Tube Glasröhre ist spülmaschinenfest*

*Logo auf dem Glas kann verfärbt werden.

Es wird empfohlen, den Active Tube Innenraum nach 10x zu ersetzen.